

Using Instructions

Pacifier

Before first use place the pacifier in boiling water for 5 minutes. Allow to cool and squeeze out any trapped water from the pacifier. This is to ensure hygiene.

Clean before each use thoroughly with running warm water. For babies up to 3 months disinfect the pacifier regularly (boiling or similar). Make sure that there is always enough water in the pot for to avoid material damage. Do not clean in dishwasher or disinfect in microwave oven – detergents or heating in patches will cause material damage.

Do not leave the pacifier in direct sunlight or near a source of heat or leave in disinfectant (“sterilizing solution”) for longer than recommended, as this may weaken the teat.

Never dip teat in sweet substances or medication, your child may get tooth decay and/or material damage may occur.

For your child's safety

WARNING!

Inspect carefully before each use. Pull the soother in all directions.

Throw away at the first signs of damage or weakness.

Only use dedicated soother holders tested to EN 12586.

Never attach other ribbons or cords to a soother, your child may be strangled by them.

Cracks, traces of bites, stickiness or changes of shape may cause separation and swallowing of parts of the teat – choking hazard!

Replace the pacifier between 1 and 2 months of use, for hygienic and safety reasons.

In the event that the pacifier becomes lodged in the mouth of your child, **DO NOT PANIC**, it cannot be swallowed and is designed to cope with such an event. Remove from mouth with care as gently as possible.

Longer use may cause tooth and/or jaw damage.

Please keep product and using instructions.

In case of a complaint: keep manufacturer address and article number.