

Using Instructions

Mouth Cleaning Finger

Clean the product before first use. Pull the Mouth Cleaning Finger completely over your index finger. It is flexible and will adapt itself to your finger shape. Slightly damp the Mouth Cleaning Finger before usage. Now you can gently clean and massage the oral cavity of your child with the Mouth Cleaning Finger.

Clean thoroughly under running warm water after each use. Alternatively, you can wash the Mouth Cleaning Finger with max. 60°C in your washing machine. Always use a washing net, otherwise the product might get damaged. Only wash the Mouth Cleaning Finger together with textiles of the same color and in the gently cycle mode. Please only use detergents without perfumes. Do not use any softeners. Washing can cause color fading. Wring out the Mouth Cleaning Finger after cleaning and let it dry in a clean and bright place. Do not clean in the dishwasher or sterilize in the microwave. Cleaning detergents and uneven heating are causing material damages.

For your child's safety

WARNING!

Inspect the Mouth Cleaning Finger carefully before each use for wear or damage. Throw the Mouth Cleaning Finger away at the first signs of damage or weakness. Please exchange the product as soon as it shows unsightly discoloration. Never dip Mouth Cleaning Finger in sweet substances or medication, your child may get tooth decay and/or material damage may occur. Do not dry-clean. Do not bleach. Not suitable for cold water sterilization. Replace it after 1 or 2 months of use, for hygienic and safety reasons. Usage only with short fingernails. This product is not a toy. Please do leave your children unattended with the Mouth Cleaning Finger.

Please keep product and using instructions.

In case of a complaint: keep manufacturer address and article number.